

## Datasheet

Miniature self-contained photoelectric sensors in universal housing



- · Easily fits (or retrofits) almost any mounting situation
- Exceptional optical performance, comparable to larger "MINI-style" or barrel sensors
- 10 to 30 V dc operation, with complementary (SPDT) NPN or PNP outputs, depending on model
- $\bullet~$  Bright LED operating status indicators are visible from 360  $^\circ$
- · Rugged sealed housing, protected circuitry
- Models available with or without 18 mm threaded "nose"
- · Less than 1 millisecond output response for excellent sensing repeatability
- Choose 2 m (6.5 ft) or 9 m (30 ft) cable or 150 mm (6 inch) Pico-style pigtail QD



WARNING: Not To Be Used for Personnel Protection

Never use this device as a sensing device for personnel protection. Doing so could lead to serious injury or death. This device does not include the self-checking redundant circuitry necessary to allow its use in personnel safety applications. A sensor failure or malfunction can cause either an energized or de-energized sensor output condition.

### Models

To order the 9 m (30 ft) cable models, add the suffix "W/30" to the cabled model number.

QD Models. For 4-pin integral Euro-style QD, add suffix "Q8" (for example, QS186EQ8). For 4-pin integral Pico-style QD, add suffix "Q7" (for example, QS186EQ7). For 4-pin 150 mm (6 in) Euro-style pigtail, add suffix "Q5" (for example, QS186EQ5). For 4-pin 150 mm (6 in) Pico-style pigtail, add suffix "Q" (for example, QS186EQ).

Opposed Mode	Model	Range	Output
Effective beam: 13 mm (0.5 inch)	QS186EV (624 nm Visible Red)		N/A
OPPOSED OPPOSED	QS186E (940 nm Infrared)	20 m (66 ft)	N/A
	QS18VN6R	20 111 (66 11)	NPN
	QS18VP6R		PNP
Effective beam: 13 mm (0.5 inch)	QS186EB (940 nm Infrared)		N/A
OPPOSED	QS18VN6RB	3 m (10 ft)	NPN
	QS18VP6RB		PNP


Polarized Retroreflective Mode	Model	Range	Output
630 nm Visible Red	QS18VN6LP		NPN
POLAR RETRO	QS18VP6LP	3.5 m (12 ft)	PNP

Retroreflective Mode	Model	Range	Output
628 nm Visible Red	QS18VN6LV		NPN
RETRO	QS18VP6LV	6.5 m (21 ft)	PNP



Convergent Mode	Model	Range	Output
630 nm Visible Red	QS18VN6CV15	1/ (0 / 2 in)	NPN
	QS18VP6CV15	16 mm (0.63 in)	PNP
	QS18VN6CV45	42 (1 7)	NPN
CONVERGENT VISIBLE RED	QS18VP6CV45	43 mm (1.7 in)	PNP
Diffuse Mode	Model	Range	Output
940 nm Infrared	QS18VN6D		NPN
DIFFUSE	QS18VP6D	450 mm (18 in)	PNP
	QS18VN6DB (Diffuse, wide)		NPN
DIFFUSE	QS18VP6DB (Diffuse, wide)		PNP
Divergent Mode	Model	Range	Output
940 nm Infrared	QS18VN6W		NPN
DIVERGENT	QS18VP6W	100 mm (4 in)	PNP
Fixed Field Mode	Model	Range	Output
660 nm Visible Red	QS18VN6FF50	50 mm (0 lm)	NPN
	QS18VP6FF50	50 mm (2 in)	PNP
	QS18VN6FF100	100 mm (4 in)	NPN
FIXED-FIELD FIXED	QS18VP6FF100	100 11111 (4 111)	PNP
Plastic Fiber Optic Mode	Model	Range	Output
660 nm Visible Red	QS18VN6FP		NPN
PLASTIC FIBER	QS18VP6FP	Range varies by sensing mode and fiber optics used	PNP
Glass Fiber Optic Mode	Model	Range	Output
940 nm Infrared	QS18VN6F		NPN
GLASS FIBER	QS18VP6F	Range varies by sensing mode and fiber optics used	PNP

# Wiring Diagrams

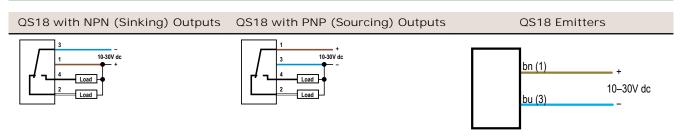

## Installing Fibers

## Cutting Unterminated Plastic Fibers QS18V..6FP

Unterminated plastic fibers are designed to be cut by the user to the length required for the application.

To facilitate cutting, a Banner model PFC-1 cutting device is supplied with the fiber. Cut the fiber as follows:

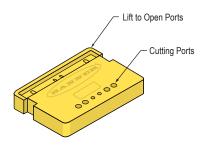


Figure 1. PFC-1 Cutting Device

Use small ports for fiber sizes:

- 0.25 mm (0.01 inches)
- 0.5 mm (0.02 inches)

Use large ports for fiber sizes:

- 0.75 mm (0.03 inches)
- 1.0 mm (0.04 inches)
- 1.5 mm (0.06 inches)
- 1. Locate the control end of the fiber (the unfinished end).
- 2. Determine the length of fiber required for the application. If using a bifurcated fiber, separate the two halves of the fiber at least 51 mm (2 inches) beyond the fiber cutting location.
- 3. Lift the top (blade) of the cutter to open the cutting ports.
- 4. Insert one of the control ends through one of the cutting ports on the cutter so that the excess fiber protrudes from the back of the cutter.
- 5. Double-check the fiber length, and close the cutter until the fiber is cut.
- 6. Using a different cutting port, cut the second control end to the required length.



NOTE: To ensure a clean cut each time, do not use a cutting port more than once.

7. Gently wipe the cut ends of the fiber with a clean, dry cloth to remove any contamination. Do not use solvents or abrasives on any exposed optical fiber.

## Installing Plastic Fibers QS18V..6FP

Follow these steps to install the plastic fibers.

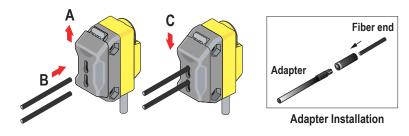


Figure 2. Installing Plastic Fibers

- 1. Slide the fiber gripper up to unlock it (A).
- 2. If using 0.25 mm or 0.5 mm core fibers, slide the plastic fiber adapters onto the fibers, flush with the fiber ends.
- 3. Carefully insert the prepared plastic fiber ends into the ports (B) as far as possible without applying extra force.
- 4. Slide the fiber gripper down to lock the fibers in place (C).

## Installing Glass Fibers QS18V..6F

Follow these steps to install the glass fibers.

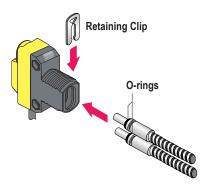


Figure 3. Installing Glass Fibers

- 1. Slide the supplied o-ring on the sensor end of the fibers, as shown.
- 2. Press the fiber ends firmly into the ports located on the front of the sensor.
- 3. Slide the supplied u-shaped retaining clip into the slot in the sensor's barrel until the clip snaps into place.

## Specifications

### Supply Voltage

10 to 30 V dc (10% maximum ripple) at less than 25 mA, exclusive of load:

Protected against reverse polarity and transient voltages

#### Light Source

Glass Fiber Optic, Opposed and Diffuse mode models: Infrared, 940 nm Plastic Fiber Optic, Retroreflective, Convergent and FF mode models: Visible red, 660 nm

#### Adjustments

Glass Fiber Optic, Plastic Fiber Optic, Convergent, Diffuse, and Retroreflective mode models (only): Single-turn sensitivity (Gain) adjustment potentiometer

#### Indicators

2 LED indicators on sensor top:

Green solid: Power on

Amber solid: Light sensed

Green flashing: Output overloaded

Amber flashing: Marginal excess gain (1 to 1.5x excess gain) Note: Prior to date code 0223, the output indicator was red.

#### Required Overcurrent Protection



WARNI NG: Electrical connections must be made by qualified personnel in accordance with local and national electrical codes and regulations.

Overcurrent protection is required to be provided by end product application per the supplied table.

Overcurrent protection may be provided with external fusing or via Current Limiting, Class 2 Power Supply.

Supply wiring leads < 24 AWG shall not be spliced.

For additional product support, go to <a href="http://">http://</a>

www.bannerengineering.com.

Supply Wiring	Required Overcurrent Protection	
20	5.0 Amps	
22	3.0 Amps	
24	2.0 Amps	
26	1.0 Amps	
28	0.8 Amps	
30	0.5 Amps	

#### Repeatability

Opposed Mode: 100 microseconds FF Mode: 160 microseconds All others: 150 microseconds

#### Output Configuration

Solid-state complementary (SPDT): NPN or PNP (current sinking or

sourcing), depending on model;

Rating: 100 mA maximum each output at 25 °C

Off-state Leakage Current (FF Mode): less than 200  $\mu$ A @ 30V dc Off-state Leakage Current (All others): less than 50  $\mu$ A @ 30V dc ON-state Saturation Voltage: less than 1 V @ 10 mA; less than 1.5 V @ 100 mA

Protected against false pulse on power-up and continuous overload or short circuit of outputs

#### Output Response

Opposed Mode: 750 microseconds ON; 375 microseconds OFF

FF Mode: 850 microseconds ON/OFF All others: 600 microseconds ON/OFF

Note: 100 millisecond delay on power-up; outputs do not conduct

during this time

### Construction

ABS housing

3 mm mounting hardware included

### Connections

2 m (6.5 ft) 4-wire PVC cable, 9 m (30 ft) 4-wire PVC cable, 4-pin Picostyle or Euro-style QD, 4-pin Pico-style or Euro-style 150 mm (6 in) pigtail QD, depending on model

#### Environmental

IEC IP67; NEMA 6

## Operating Conditions

Temperature: -20 °C to 70 °C (-4 °F to 158 °F) Relative Humidity: 90% @ 50 °C (non-condensing)


Certifications—All models





Certifications—QS18Vx6FFxxx models





### **Dimensions and Features**

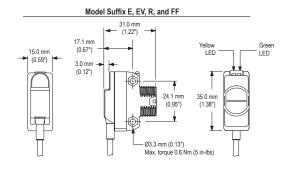


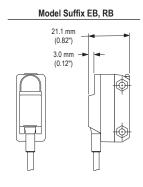


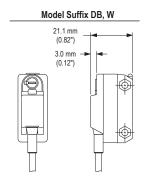


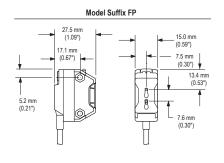

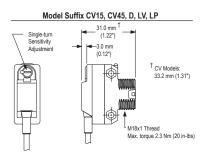


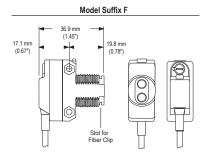


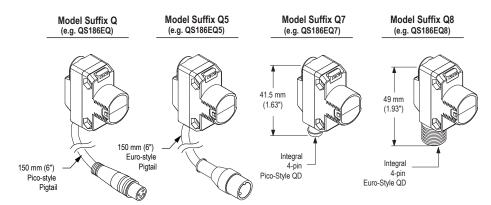


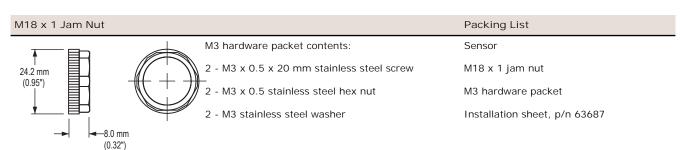



### Performance Curves

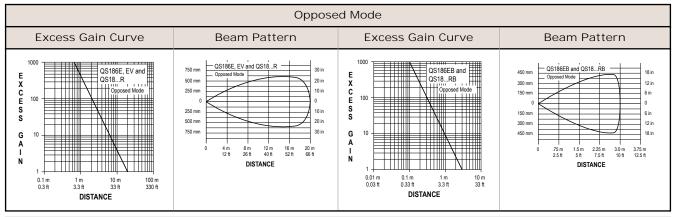


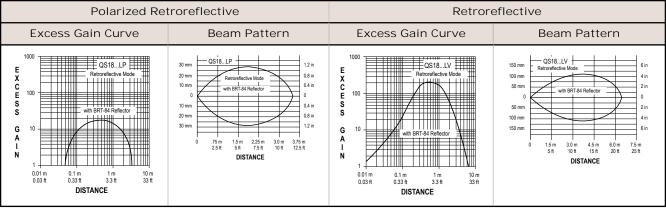


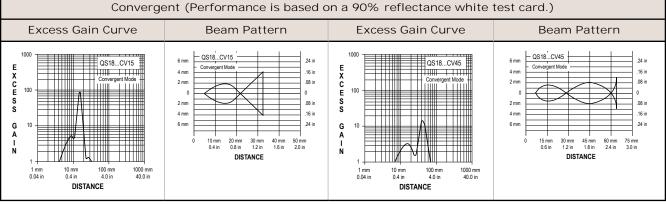


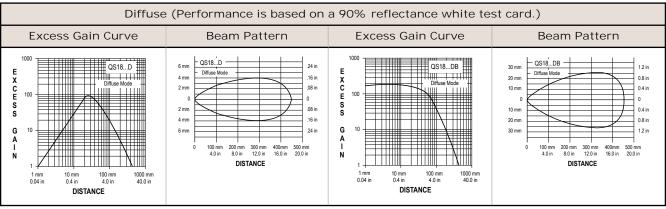

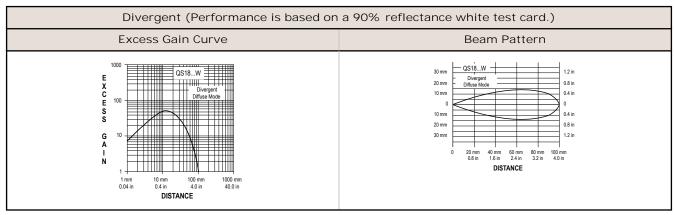

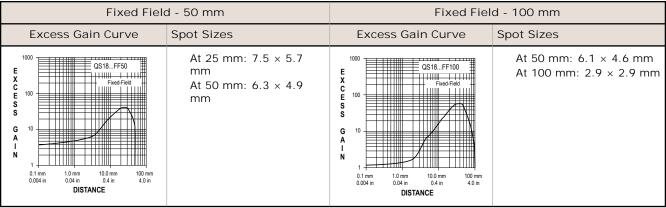

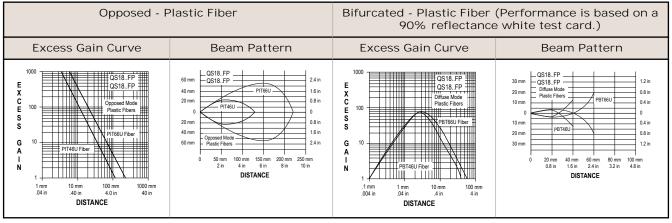

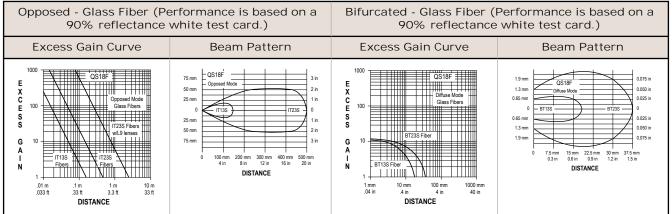

## Accessories

## Cordsets

4-Pin Threaded M12/Euro-Style Cordsets				
Model	Length	Style	Dimensions	Pinout (Female)
MQDC-406	1.83 m (6 ft)		<del> </del>	
MQDC-415	4.57 m (15 ft)	Straight		
MQDC-430	9.14 m (30 ft)		M12x1	
MQDC-450	15.2 m (50 ft)		ø 14.5 <u></u>	1 (00) 2
MQDC-406RA	1.83 m (6 ft)		, 32 Тур.	4
MQDC-415RA	4.57 m (15 ft)	- Right-Angle	[1.26"]	1 Proug
MQDC-430RA	9.14 m (30 ft)		30 Typ.	1 = Brown 2 = White
MQDC-450RA	15.2 m (50 ft)		M12 x 1	3 = Blue 4 = Black

 
4-Pin Snap-on M8/Pico-Style Cordsets				
Model	Length	Style	Dimensions	Pinout (Female)
PKG4-2	2 m (6.56 ft)	Straight	32 Typ. ————————————————————————————————————	4 2 3 6 9 1
PKW4Z-2	2 m (6.56 ft)	Right-Angle	29 Typ. ————————————————————————————————————	1 = Brown 2 = White 3 = Blue 4 = Black

### WORLD-BEAM QS18 Brackets

#### SMB18A

- Right-angle mounting bracket with a curved slot for versatile orientation
- 12-ga. stainless steel
- 18 mm sensor mounting hole
- Clearance for M4 (#8) hardware

Hole center spacing: A to B = 24.2 Hole size: A =  $\emptyset$  4.6, B = 17.0  $\times$  4.6, C =  $\emptyset$  18.5



### SMB312S

 Stainless steel 2-axis, side-mount bracket



A = 
$$4.3 \times 7.5$$
, B = diam. 3, C =  $3 \times 15.3$ 

All measurements are in millimeters.

### Retroreflective Targets

See the Accessories section of your current Banner Engineering Corp catalog for complete information.



NOTE: Polarized sensors require corner cube type retroreflective targets only.

### Plastic and Glass Fiber Optics

See the Accessories section of your current Banner Engineering Corp catalog for a list of plastic and glass fiber optic cables.

## Banner Engineering Corp Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp.