E3S

CSM_E3S_DS_E_11_1

General-purpose Photoelectric Sensor for High Quality and Reliable Detection





Be sure to read *Safety Precautions* on page 8.

Note: E3S-2/-5/-DS10/-DS30/-R2 in this catalog have been discontinued at the end of March 2014.

Ordering Information

General-purpose Sensors

Sensing method	Appearance	Sensing distance	Operation mode	Model
Convergent-reflective (narrow vision field)		30 to 100 mm (variable)		E3S-LS10XE4 2M
Convergent-reflective (wide vision field)		50 to 250 mm (variable)		E3S-LS20XE4 2M
Through-beam		2 m		E3S-2E4 * Emitter E3S-2LE4 * Receiver E3S-2DE4 *
mough-beam		5 m		E3S-5E4 * Emitter E3S-5LE4 * Receiver E3S-5DE4 *
Retro-reflective		0.1 to 2 m		E3S-R2E4 *
Diffuse-reflective		100 mm	Light-ON/Dark-ON	E3S-DS10E4 *
Diffuse-reflective		300 mm	(selectable)	E3S-DS30E4 *
Thurstisch haare		2 m		E3S-2E41 * Emitter E3S-2LE41 * Receiver E3S-2DE41 *
Through-beam		5 m		E3S-5E41 * Emitter E3S-5LE41 * Receiver E3S-5DE41 *
Retro-reflective	Ų	0.1 to 2 m		E3S-R2E41 *
D'''		100 mm	-	E3S-DS10E41 *
Diffuse-reflective		300 mm		E3S-DS30E41 *

^{*} Production was discontinued.

Ratings and Specifications


Sensing	g method	Through-beam		Retro-re- flective	Di	ffuse-reflecti	ve	Converger	Convergent-reflective	
Item	Model	E3S-2E4 E3S-2E41	E3S-5E4 E3S-5E41	E3S-R2E4 E3S-R2E41	E3S- DS10E4 E3S- DS10E41	E3S- DS30E41	E3S- DS30E4S	E3S- LS10XE4	E3S- LS20XE4	
Sensing o	listance	2 m	5 m	0.1 to 2 m	100 mm (white paper 50 x 50 mm)	300 mm (white paper	100 x 100)	30 to 100 mm Continuously variable (10 x 10 mm)	50 to 250 mm Continuously variable (50 x 75 mm)	
Standard object	sensing	Opaque: 7- Opaque: 11- Opaque: 30- mm dia. min. mm dia. min.			Transparent, opaque					
Differentia	al travel				20% max. of setting distance			1.5 mm max. at 30 mm 10 mm max. at 100 mm	5% max. at 50 to 250 mm	
Directiona	al angle	Both emitter and receiver: 3° to 10°						l.	1	
Light sou (waveleng		Infrared LED (950 nm)						RED LED (660 nm)	Infrared LED (950 nm)	
Power su voltage	pply	12 to 24 VDC	±10%, ripple	(p-p): 10% max	₹.					
Current consump	tion	50 mA max. (Emitter: 25 mA max., Receiver: 25 mA max.) 40 mA max.								
Control o (solid-sta put)	_	Output current: 1.5 to 4 mA, Load current: 80 mA max. (residual voltage: 2 V max.) → Refer to page 4.								
Response	time	Operate or reset: 3 ms max. Operate or reset: 1 ms max.								
Sensitivit adjustmen		With an indicator								
Ambient illumination (Receiver		Incandescent lamp: 3,000 lx max. Sunlight: 10,000 lx max.								
Ambient temperatu	ıre	Operating: -25 to 55°C, Storage: -40 to 70°C (with no icing or condensation)								
Ambient I	numidity	Operating: 35% to 85%, Storage: 35% to 95% (with no condensation)								
Insulation		20 MΩ min. a	20 M Ω min. at 500 VDC							
Dielectric	strength	1,000 VAC, 5	0/60 Hz for 1 n	nin						
Vibration resistance (destruction)	е	10 to 55 Hz, 1.5-mm double amplitude for 2 hours each in X, Y, and Z directions								
Shock res (destructi		500 m/s ² 3 times each in X, Y, and Z directions								
Degree of protection		IEC IP65	IEC IP67		IEC IP65 IEC IP67					
Connection method	on	Pre-wired cable (standard length: 2 m)								
Indicators	\$	Light indicator (red), Stability indicator (green)								
	Case	Polybuty- lene tereph- thalate Polybuty- lene tereph- zinc die-cast lene tereph- thalate Zinc die-cast thalate								
Material	Lens *	Polycarbonate								
	Mount- ing Bracket	Iron								

^{*}The ambient operating illumination is the illumination that changes the output ±20% at 200 lx. It is not the operational limit.


Engineering Data (Reference Value)

Parallel Operating Range

E3S-2E4 (41)

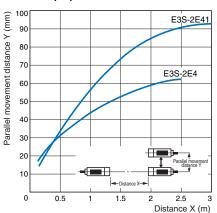


E3S-5E4 (41)

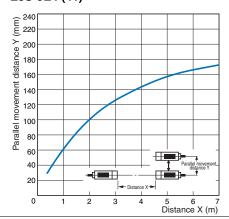


Operating Range


E3S-DS10E4 (41)

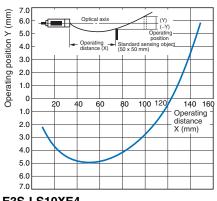


E3S-DS30E4 (41)

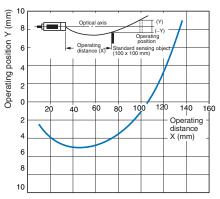

E3S-LS10XE4

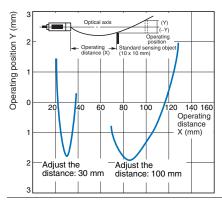


E3S-LS20XE4

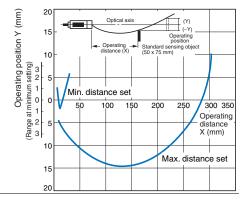


Sensing Distance vs. Size of Sensing Object

E3S-DS30E4 (41)

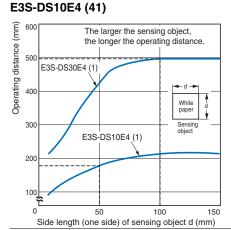


E3S-LS20XE4

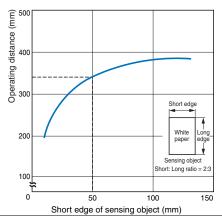


Parallel Operating Range

E3S-R2E4 (41) (42)

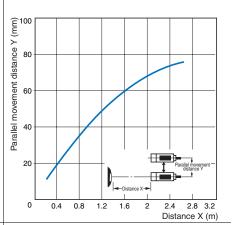


Excess Gain vs. Set Distance


E3S-LS10XE4

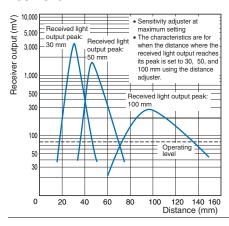

E3S-LS3RC4

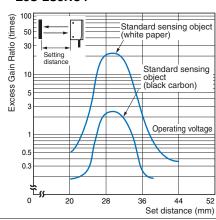

Load Residual Voltage Characteristics

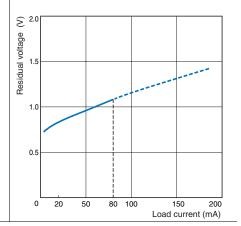

I/O Circuit Diagrams


Model	Wire color	Item Power polarity	Opera- tion mode	Output circuit	Timing charts
	Brown	+	Light-ON	Stability indicator (green) Photo-electric Pensor main circuit Load 2 *2	Incident light No incident light Light indicator ON (red) OFF Output transistor ON
E3S	Blue	0 V	Light-ON	Z: Zener diode (Vz = 30 V) *1: Reverse the polarity of the power supply to switch the operating mode. *2: Voltage output (when connecting transistor circuit)	Load 1 OFF (e.g., relay) Operate Reset (Between brown and black) Load 2 H L (Between blue and black)
E33	Brown	0 V	Dark-ON	Light indicator (green) Photo-electric electric rount circuit Photo-electric photo-electric product and photo-electric photo	Incident light No incident light Light Light ON (red) OFF Output Transistor ON
	Blue	+	Bank Giv	Z: Zener diode (Vz = 30 V) *1: Reverse the polarity of the power supply to switch the operating mode. *2: Voltage output (when connecting transistor circuit)	Load 1 OFF (e.g., relay) Operate Reset (Between blue and black) Load 2 H L (Between brown and black)

Connection

With Relay Load

Through-beam Sensors


Light Interrupted and Load Operating for E3S-2E4 (41) and -5E4 (41)



Note: The indicator will function as a light indication if the Emitter's pink wire is connected to the Receiver's black wire as indicated by the dotted line. The indicator will function as a power indicator if the Emitter's pink wire is connected to the Emitter's blue wire.


Retro-reflective Sensors

Light Interrupted and Load Operating for E3S-R2E4 (41) (42), -DS10E4(41), and -DS30E4 (41)




Connection with S3D2 Sensor Controller

Reverse operation is possible using the signal input switch on the S3D2.

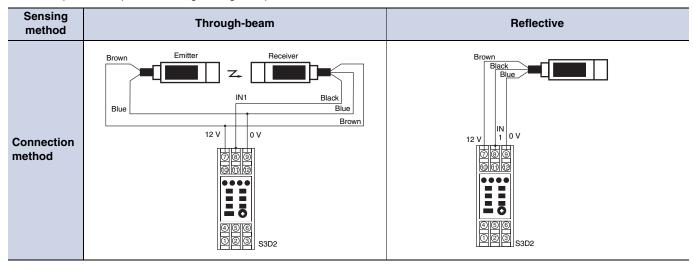

Adjustment Methods

Adjusting the E3S-LS10XE4 Convergent-reflective Sensor

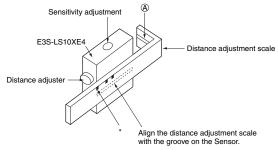


- 1. Attach the distance adjustment scale as shown in the figure and set it where the * mark is equal to the sensing distance.
- 2. Turn the distance adjuster until the red spot is at point (center of the distance adjustment scale).
- Remove the distance adjustment scale once the distance has been adjusted. Put a sensing object in place, and then adjust the sensitivity.

Adjusting the E3S-LS20XE4 Convergent-reflective Sensor

Adjustment Method 1


Use this method if the sensing object is more reflective than the background.

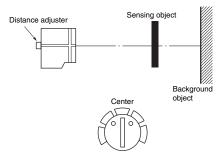

- Set the sensitivity adjuster to the center as shown in the figure.
- Turn the distance adjuster counterclockwise until it is fully turned (L to S).
- 3. Position the sensing object.
- 4. Slowly turn the distance adjuster clockwise (S to L).
- 5. Eventually the LIGHT (red) indicator will light. Turning the adjuster further will <u>light the STABILITY (green) indicator</u>. <u>Leave the distance adjuster at this level</u>.
- Adjust the sensitivity in this state.

Adjustment Method 2

Use this method if the background is more reflective than the sensing object.

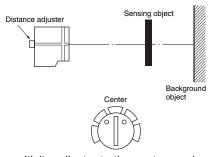

- 1. Set the sensitivity adjuster to the center as shown in the figure.
- Turn the distance adjuster clockwise until it is fully turned (S to L).
- 3. Remove the sensing object.
- 4. Slowly turn the distance adjuster counterclockwise (L to S).
- 5. Eventually the LIGHT (red) indicator will light. Turning the adjuster further will <u>light the STABILITY (green) indicator</u>.
- 6. Adjust the sensitivity in this state.

Safety Precautions

MARNING

This product is not designed or rated for ensuring safety of persons.


Do not use it for such purposes.



Precautions for Correct Use


Do not use the product in atmospheres or environments that exceed product ratings.

If the sensing object has a metallic or shiny surface, the E3S-R may not detect it properly. To avoid this situation, place the sensing object so that it is not at right angles to the Photoelectric Sensor.

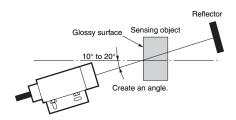

● Attaching the E39-S Slit

- The Slit can be fitted vertically or horizontally as indicated by the dotted line. Make sure that Slits for the Emitter and the Receiver are fitted in the same orientation.
- Place the packing in the supporter and hook the claws on the indentations in the Sensor head.
- If the supporter is contacting the mounting surface, insert a spacer to separate it. (Refer to *Slit Dimensions*.)
- An operating position accuracy of 0.1 mm max. can be achieved for a Through-beam Sensor without Slits.

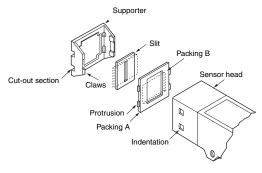

Sensor with Slits

Applicable Photoelectric Sensor		E3S-5I	E4, -5E41	E3S-2E4, -2E41			
Model		E3	9-S1		E39-S2		
Item Slit width	0.5 mm	0.5 mm 1 mm 2 mm 4 mm				1 mm	2 mm
Sensing distance	230 mm	580 mm	1200 mm	2500 mm	170 mm	420 mm	820 mm
Sensing object	0.5 mm 1 mm 2 mm 4 mm 0.5 mm 1 mm 2 mm					2 mm	
Degree of protection	IP60						

Sensors with Open-collector Outputs

Sensors with Open-collector Outputs


Туре	Output type	Output transistor	Rated current output	Switching current	Output protection circuit
E	Voltage or current output	NPN	1.5 to 4 mA	80 mA max. (sinking)	Provided against an increase in the residual output voltage
С	Open- collector output	NPN		100 mA max. (sinking)	Provided: Output transistor cutoff
В	Open- collector output	PNP	l	100 mA max. (sourcing)	Provided: Output transistor cutoff

The model numbers are as follows:


Example:

E3S-DS10E4 (E type) E3S-DS1C4 (C type) E3S-DS1B4 (B type)

C4 (C41, C42) Sensors

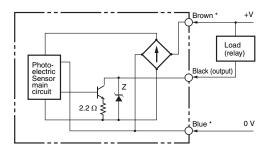

C4 (B41, B42) Sensors

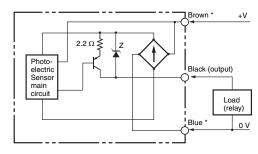

Z: Zener diode (Vz = 30 V)

* The operation mode depends on the wiring of the brown and blue lines.

Note 1. Only C42 models with die-cast cases are available.

- 2. The Emitter for a Through-beam C4-type Sensor is the same as the Emitter for an E4-type Sensor. (E.g., E3S-5LE4)
- When a C- or B- type Sensor experiences a load short-circuit or overload, the output transistor will be turned OFF. Check the load conditions before turning the power back ON.

Sensors with Different Orientations


The E3S-5, E3S-DS30, and E3S-R2 that sense in different directions can be made.

Sensing method	Sensing direction
Through- beam	E3S-5E43 E3S-5E44 E3S-5E44
Retro- reflective Diffuse- reflective	E3S-DS30E43 E3S-R2E43


Dimensions

General-purpose Sensors


E3S-2E4 4-dia, vinvl-insulated round cable with 2/3 conductors (Conductor cross section: 0.2 mm², Insulator diameter: 1.1 mm), Standard length: 2 m Weight: Emitter and Receiver, 80 g each Sensitivity adjuster*2 Indicato (50) --18.8 40 |-9-|-11. 6 dia. Lens: 7 dia 12.8 dia. 3.2 E39-L3 -9--20 **-**16 2-Two, M3 -25.1 *1 The mounting bracket can also be used on side (A). *2 Receiver only.

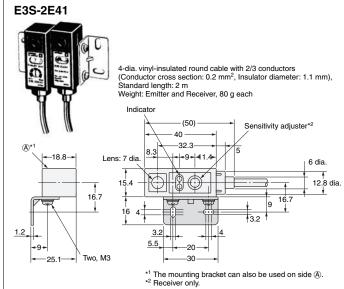

E3S-5E4

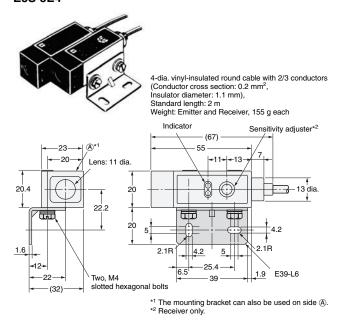

E3S-5E41

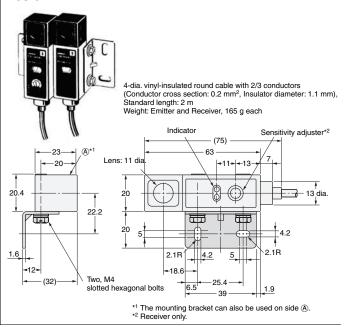


Note: Models numbers for Through-beam Sensors (E3S-□E4, E3S-□E41) are for sets that include both the Emitter and Receiver.

The model number of the Emitter is expressed by adding "L" to the set model number (example: E3S-2LE4), the model number of the Receiver, by adding "D" (example: E3S-2DE4.) Refer to Ordering Information to confirm model numbers for Emitter and Receivers.

E3S-DS10E4



4-dia. vinyl-insulated round cable with 3 conductors (Conductor cross section: 0.2 mm², Insulator diameter: 1.1 mm), Standard length: 2 m Weight: Approx. 80 g

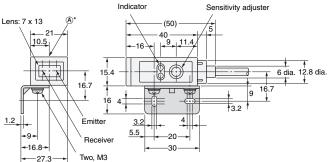


* The mounting bracket can also be used on side $\hat{\mathbb{A}}$.

E3S-DS10E41




4-dia. vinyl-insulated round cable with 3 conductors (Conductor cross section: 0.2 mm², Insulator diameter: 1.1 mm), Standard length: 2 m Weight: Approx. 80 g

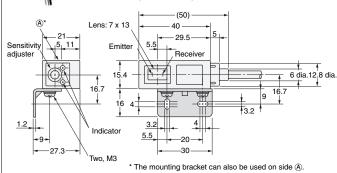

E3S-R2E4 E3S-DS30E4




4-dia. vinyl-insulated round cable with 3 conductors (Conductor cross section: $0.2~\text{mm}^2,$ Insulator diameter: 1.1~mm), Standard length: 2~m Weight: Approx. 155 g

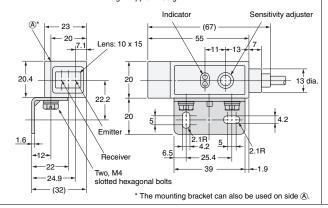

E3S-R2E41 E3S-DS30E41



4-dia. vinyl-insulated round cable with 3 conductors (Conductor cross section: 0.2 mm², Insulator diameter: 1.1 mm), Standard length: 2 m Weight: Approx. 165 g

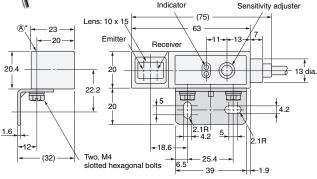

* The mounting bracket can also be used on side (A).

E3S-R2E42 E3S-LS10XE4 4-dia. vinyl-insulated round cable with 3 conductors (Conductor cross section: 0.2 mm², Insulator diameter: 1.1 mm), Standard length: 2 m Weight: Approx. 225 g E3S-LS20XE4 4-dia. vinyl-insulated round cable with 3 conductors (Conductor cross section: 0.2 mm², Insulator diameter: 1.1 mm), Standard length: 2 m Weight: Approx. 165 g 2.1R 6+ Indicator --18.6 Lens: 10 x 15 Distance adjuster Receiver Two, M4 slotted hexagonal bolts Lens: 14 x 47 Sensitivity adjuster Emitter Sensitivity adjuster Indicator (75) -23--63 -20--11--13 Emitter 20.4 Optical axis 8 dia. 20 55 10.2 70 22.2 Receiver 4.9 曲 ᇤ 2.1R Two, 4.4 dia -12 -25.4 -16-Two, M4 slotted hexagonal bolts 50 * The mounting bracket can also be used on side $\ensuremath{\textcircled{\sc A}}.$

Mounting Hole Dimensions

E3S-2E4 E3S-2E41 E3S-DS10E4 E3S-DS10E41 E3S-LS10XE4 E3S-LS20XE4




E3S-5E4 E3S-5E41 E3S-R2E4 E3S-R2E41 (42) E3S-DS30E4 E3S-DS30E41





Accessories (Order Separately)


Special Mounting Bracket

E39-L2



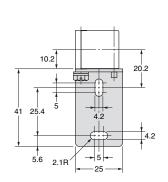


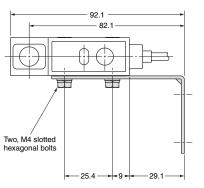






E3S-DS30E41

E39-L4



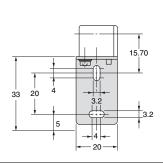

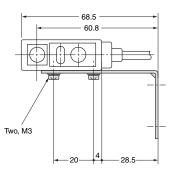



Applicable models: E3S-2E41 E3S-DS10E41


Reflector

E39-R1

(Provided with the E3S-R2E4(41) Retro-reflective Reflector.)

Material:




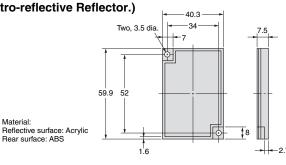

Sensitivity Adjuster (Provided)

E39-G1







Applicable models: Provided with the E3S-5E4(41), E3S-DS30E4(41), E3S-R2E4(41). Note: Cannot be used for the E3S-DS10E4 (41).

Slit (Order Separately)

E39-S2





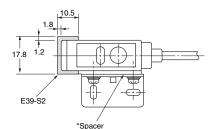


Slit	E39-S2
Applicable	E3S-2E4
Sensors	E3S-2E41


Note 1. Three sets of slits are provided: $6.5\,x\,0.5$ mm, $6.5\,x\,1$ mm and $6.5\,x$ 2 mm

One set consists of two slits, one each for the Emitter and Receiver.

E39-S1





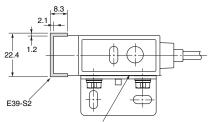

Slit	E39-S1
Applicable	E3S-5E4
Sensors	E3S-5E41

Note 1. Four sets of slits are provided: 11 x 0.5 mm, 11 x 1 mm, 11 x 2 mm, and 11 x 4 mm 2. One set consists of two slits, one

each for the Emitter and Receiver.

Note: The dimensions in parentheses are for when the Spacer is not used.

*With the E3S-2E4 (41), use the Spacer as shown in the figure above so that the supporter and Mounting Bracket will not be struck when the optical axis is adjusted.

With the E3S-5E4 (41), the Spacer is not particularly required. Use the Spacer, however, to directly mount both the E3S-2E4 (41) and -5E4 (41).

In the interest of product improvement, specifications are subject to change without notice.

Terms and Conditions Agreement

Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranties.

- (a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.
- (b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE

PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See http://www.omron.com/global/ or contact your Omron representative for published information.

Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

<u>Errors and Omissions.</u> <u>Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is accurate.</u> assumed for clerical, typographical or proofreading errors or omissions.

2015.9

In the interest of product improvement, specifications are subject to change without notice.

