




EG15* ... SERIES

SOLENOID GAS VALVES WITH 1/2" CONNECTION AND OPERATING PRESSURE UP TO 500mbar.

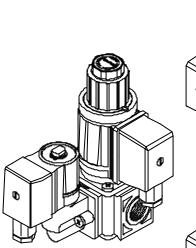





DESCRIPTION

This series of solenoid gas valves are of normally closed type, suitable for civil and industrial applications, supplied with alternate or direct current and inclusive of a wire-net filter on the inlet to avoid the entrance of dirt of > 1mm. Gas valves marked with "S" or "L" after reference type have direct current supplied coil, which permitted to make actions as silent as possible.

There is the possibility to have a fast opening or a slow opening valve (obtained by special hydraulic shock-absorber), with flow adjustment and fast opening initial flow adjustment and inlet and outlet pressure plugs.

Gas valves of this series, conforming to EN161, have a CE type Certificate (CE Reg. N° 63AQ0626) in accordance to European Directives 90/396 and 93/68.

TECHNICAL FEATURES

Class:	A
Group:	2
Supply voltage (1):	220-240Vac / 50-60Hz
	110Vac / 50-60 Hz
Operating temperature:	-10°C / +60°C
Closing time:	\leq 1s (all versions)
Opening time:	≤ 1s (quick opening
	versions only)
Mounting:	vertical and horizontal
Body:	die-cast aluminium
Core hitch:	PG9

(1) Versions with different supply voltages are available.

INSTALLATION

- Respect the applicable national and European standards (e.g. EN60335-1) regarding electrical safety.
- Assemble the valve to the installation so that the arrow on the valve body has the same direction as the fuel flow.
- During the assembly of the valve to the installation piping, avoid twisting on the sheath and always use an hexagonal key to be fitted to the valve body.
- Make sure that no foreign matters have entered the valve body.
- Make sure that the max. fuel input pressure never exceeds the value appearing on the label.

SOLENOID VALVES CONNECTIONS

It is possible to connect two valves with two fixing brackets and an O-ring to guarantee the sealing. The whole system is blocked by two screws, as shown in Fig.1. This method permits to avoid the onerous use of threaded junctions.

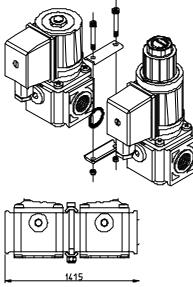


Fig.1


SOLENOID VALVES WITH BY-PASS


All versions of EG25*... and EG30*... valves can be equipped with a by-pass valve (with orifice diameter 11mm) directly fitted on the body. In this way it is avoided the installation of a separated by-pass valve.

Both to the main valve and to the by-pass one, flow is given from the same inlet gas pipe, even if they have different electrical controls.

By-pass valve can have fast opening, and can be with or without flow adjuster, but anyway inclusive of an inside rectification circuit, which permitted to use suitable attenuators, to make its actions as silent as possible.


OVERALL DIMENSIONS

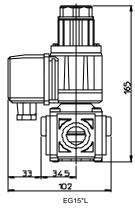



33 345 102

EG15*SR

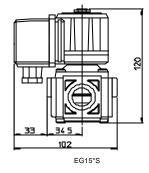

DIRECTIONS FOR EG15*L... VALVES ADJUSTMENT Flow adjustment for EG15*L...

To adjust the gas flow, you have to remove one of the two screws used to fasten the lag group (the not enamelled one, marked with 4 in Fig.2) and rotate clockwise the whole group to reduce the flow or in the opposite direction to increase it. **Opening time adjustment**

After removing the top protection, by rotating it counterclockwise, you have to act on the adjustment screw, marked with 1 in Fig.2; by rotating clockwise, the opening time becomes longer, by rotating in the opposite direction, the opening time becomes shorter.

Quick release initial flow adjustment

After removing the top protection by rotating it counterclockwise, if you rotate clockwise the nut marked with 2 in Fig.2, the initial release will be reduced; if you rotate the same nut counterclockwise, the initial release will be increased.

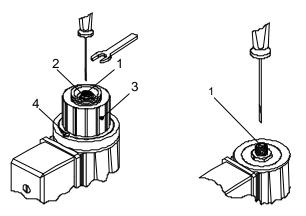


Fig.3

DIRECTIONS FOR EG15*SR... VALVES ADJUSTMENT Flow adjustment

Rotate clockwise the screw marked with 1 in Fig.3 to reduce the flow, rotate in the opposite direction to increase the same.


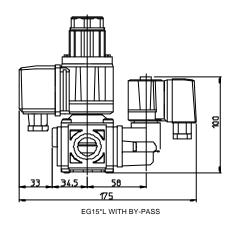


Fig.2



VALVE BODY CENTRE DISTANCE INLET/OUTLET

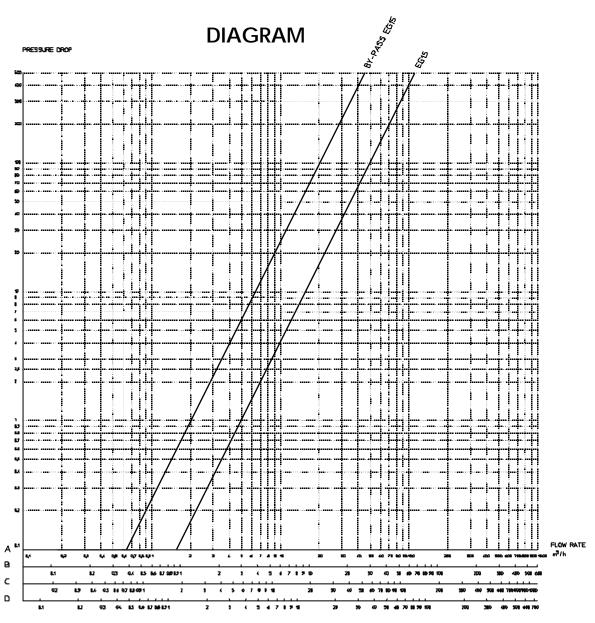

A : Standard flow rate m^3/h of NATURAL GAS dr 0.554

B : Standard ilow rate n^3/h of LPG dr 1.54


C : Standard flow rate m³/h of TOWN GAS dr 0,411

D:Standard flaw rate n³/h of AR dr 1

SUMMARY TABLE

Туре	Operating pressure (mbar)	Orifice diameter (mm)	Connections	Weight (g)	Coil	Consumption (VA)	Consumption (VA)	Flow (m³/h gas with
						220-240v	110v	$\Delta P2.5mbar)$
EG15*A	0 ÷ 500	15	G1/2"	820	BE6*A3C	22	18	8,0
EG15*A	0 ÷ 500	15	G1/2"	850	BE6*AFP	22	18	8,0
EG15*A	0 ÷ 500	15	G1/2"	852	BE6*AFD	22	18	8,0
EG15*S	0 ÷ 500	15	G1/2"	866	BE6*C3C	22	18	8,0
EG15*S	0 ÷ 500	15	G1/2"	896	BE6*CFP	22	18	8,0
EG15*S	0 ÷ 500	15	G1/2"	898	BE6*CFD	22	18	8,0
EG15*S	0 ÷ 500	15	G1/2""	918	BE6*GMO	22	18	8,0
EG15*SR	0 ÷ 500	15	G1/2"	864	BE6*C3C	22	18	8,0
EG15*SR	0 ÷ 500	15	G1/2"	894	BE6*CFP	22	18	8,0
EG15*SR	0 ÷ 500	15	G1/2"	896	BE6*CFD	22	18	8,0
EG15*SR	0 ÷ 500	15	G1/2"	916	BE6*GMO	22	18	8,0
EG15*L	0 ÷ 250	15	G1/2"	1027	BE6*GMO	22	18	8,0
BY-PASS								
EB7-S	0 ÷ 100	11		275	BE7*GMO	8	6	3.2
EB7-SR	0 ÷ 100	11		285	BE7*GMOE	14	7	3.2

TYPE REFERENCE

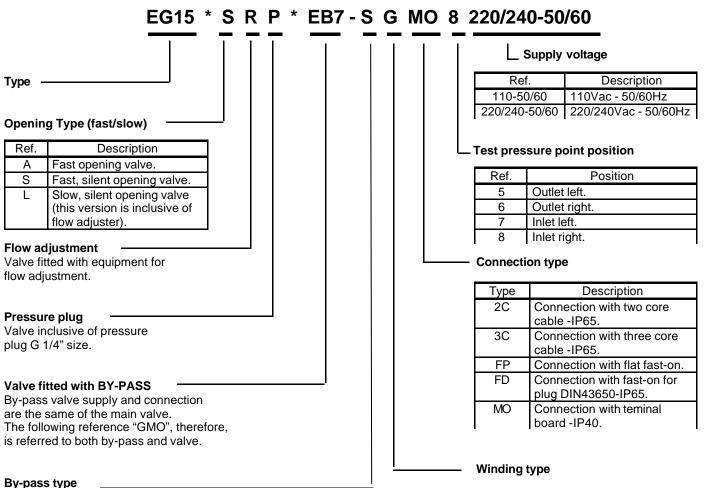

Ref.	Description	
S	Fast opening.	
SR	Fast opening with flow adjustment.	

Туре	Description
А	Supply in alternate current.
С	Supply in direct current.
G	Supply in alternate current, but valve operates in direct current thanks to an embodied rectification bridge.